

## Quick Start Guide


ST100 | Spark Plug Tester

### ⚠ SAFETY WARNING

- Never pull out or insert the spark plug with the power supply connected. Prior to any manipulation, make sure to turn off the power.
- High voltage! Avoid touching the spark plug with bare hands to prevent injury.

### PRODUCT DESCRIPTION

01

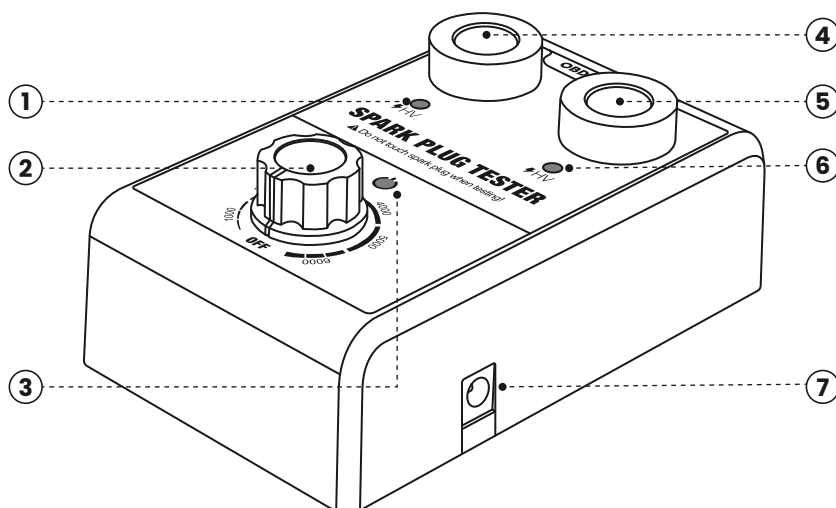


- |                               |                               |              |
|-------------------------------|-------------------------------|--------------|
| 1 HV (High Voltage Indicator) | 4 Spark Plug Socket           | 7 Power Port |
| 2 Switch                      | 5 Spark Plug Socket           |              |
| 3 Power Indicator             | 6 HV (High Voltage Indicator) |              |

## OPERATION GUIDE

02


1

Insert the spark plug into either tester socket ④ or ⑤.

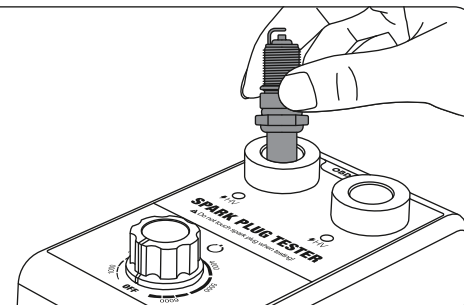


2

Insert the spark plug into the tester socket, then plug in the adaptor and connect the tester to the power supply.

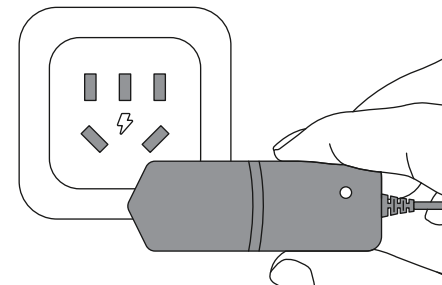

3

Turn switch ② clockwise to power on the tester. Indicator ③ will light up red.

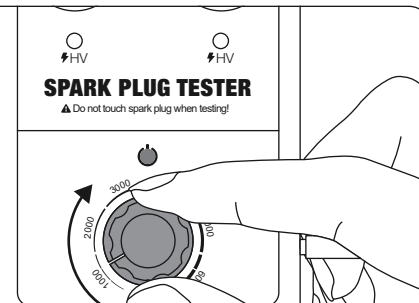

4

Turn switch ② clockwise to adjust the working frequency between 1000rpm to 6000rpm/min for stronger spark strength.

